


## Construction Joints Treatment

### Old Construction (with flowing water)

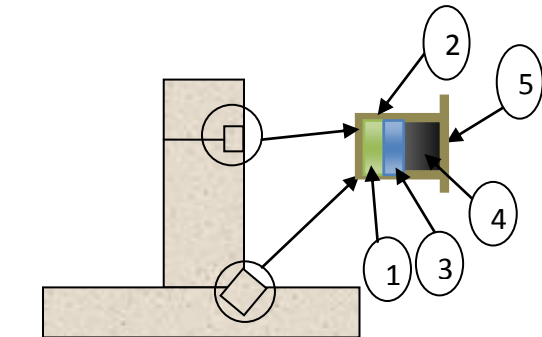

- ① PlugFast
- ② MITA Coating
- ③ MITA Putty
- ④ MIM
- ⑤ MITA Coating

#### Application Instructions:

- 1) Route out a reglet approximate 40 mm deep and 25 mm wide.
- 2) Clean the reglet with clean water and apply PlugFast putty to 1/3 depth of the groove to stop flowing water (point 1).
- 3) Apply MITA putty to 2/3 depth of the groove (Point 3).
- 4) Fill remaining groove with MIM material (point 4).
- 5) Coat the leveled surface with MITA slurry( point 5)
- 6) Cure the surface for 5 days

#### Hydronil International

B-1, Mahavir Gaurav Building, M.D. Kini Marg, Bhandup Village, Bhandup (E), Mumbai-400042, India.  
Website: [www.hydronil.com](http://www.hydronil.com); phone: 91-22-25669137