


Construction Joints Treatment

(New Construction with Waterstop of MIM)

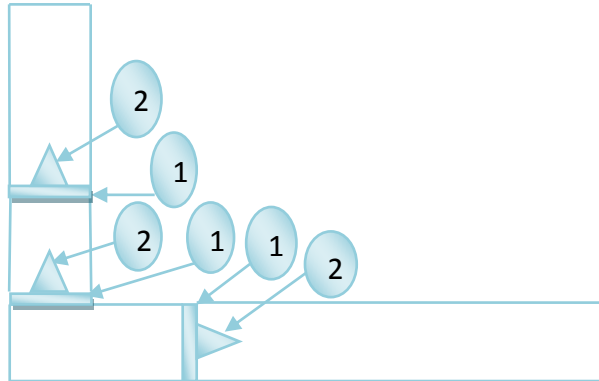

Application Instructions:

1. Clean the surface with high water jet to remove any non-cementitious and loose material.
2. Apply Multiguard In-depth Type A in slurry consistency (Item 1) on joint surface (Horizontal or Vertical) before casting fresh concrete.
3. Make triangle shape MIM prepared in Putty consistency (Item 2) with 10mm base and 15mm height on the surface of joints before casting the next concrete.
4. Once MIM is set, fresh concrete shall be cast.