


Construction Joints Treatment

Old Construction (with no flowing water)

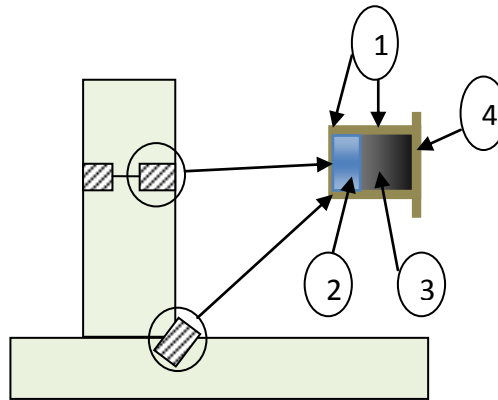

- 1) MITA Coating
- 2) MITA Putty
- 3) MIM
- 4) MITA Coating

Application Instructions:

1. Make a groove 25mm wide and 40mm deep in the joint (on wall or joint between floor and wall).
2. Clean the reglet with clean water
3. Apply MITA coating to reglet surface (item 1)
4. Apply MITA putty to 1/3 depth of the groove (item 2)
5. Fill remaining groove with MIM material (item 3)
6. Coat the leveled surface with MITA (item 4)
7. Cure the surface for 5 days

Hydronil International

B-1, Mahavir Gaurav Building, M.D. Kini Marg, Bhandup Village, Bhandup (E), Mumbai-400042, India.
Website: www.hydronil.com; phone: 91-22-25669137