


Below Grade Waterproofing from Negative side

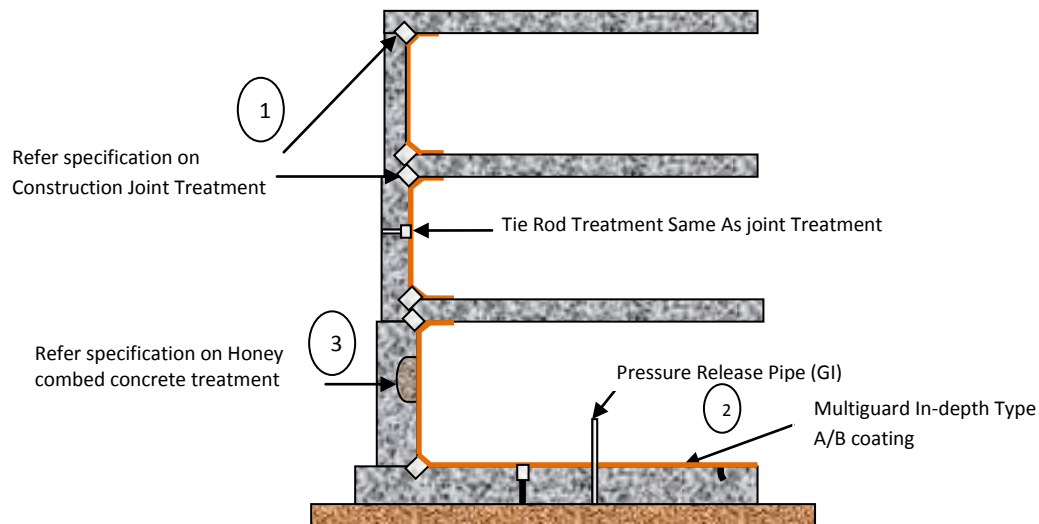

Application Instructions:

- 1) Clean with high water pressure all concrete surfaces.
- 2) Complete Joint Treatment Procedures as per specifications.
- 3) Complete Honey combed Treatment Scheme as per specifications.
- 4) Apply MITA slurry at 1kg/m^2 to all water washed (SSD conditions) surfaces.
- 5) Cure coated surface with clean water for 5 days.